



Caution:

The Mover contains 2 Neodymium magnets with a holding power of 2.7 kg. (26.5N)

Keep safely away from magnetic strips of credit cards, and pacemakers, etc.

We recommend at least 25 mm.

Be sure to follow these safety precautions.

User Manual:

Model: Speed

The Skimover is used exclusively to transport skis. Follow instructions for proper use.

The properly assembled Mover is to be fastened at the bottom of the skis. The included hook and loop fastener is then wrapped tightly around the skis according to the included instructions so that the Mover does not shift when in motion. The Mover is meant for rolling skis on walkways, streets, etc. To prevent damage, it is recommended that skis are lifted off the ground when moving across transitions, such as going from the road onto a sidewalk. Remove the Mover from the skis before attaching the skis to a roof rack.

After use, rinse the Mover with lukewarm water, disassemble, lay out to dry completely, then store in the provided storage bag. From time to time, add a drop of lubricating oil between the axle and wheel.

Disposal:

You may send the Mover back to us. We will disassemble it and safely dispose of and/or recycle all components.

