

# Mounting instructions



**SPEAKER  
LIGHT  
KITS . DE**

Speaker lighting **Rotation**

System: Spike 2 LE

- Aerosmith
- Batman 66
- Guardians of the Galaxy
- Star Wars
- Iron Maiden
- Deadpool
- Black Knight
- Elvira
- TMNT
- Jurassic Park
- Stranger Things
- Beatles
- Munsters
- The Avengers Infinity Quest
- Led Zeppelin
- Mandalorien
- Godzilla
- Rush

Note in advance:

The SpeakerLigtKit Rotation System works with a 5V power supply.

It is powered by the 12 V power supply of the pinball machine.

It should only be connected as described in this manual in order not to cause damage to the device or the lighting system.

Even if working with a low voltage, it is recommended to unplug the pinball machine before opening and mounting.

Assembly:


Open the backbox and fold down the cover.

It is recommended to put a soft object between the bezel and the disc to take the pressure off the bezel and avoid scratches on the siderails.


Unscrew the speaker and replace the foam frame and sleeves with the SpeakerLigtKit. The opening with the cables must point downwards.

The protruding sleeves point towards the speaker so that the membrane does not touch down when mounting the speaker.

The right and left loudspeakers are identical when mounted.

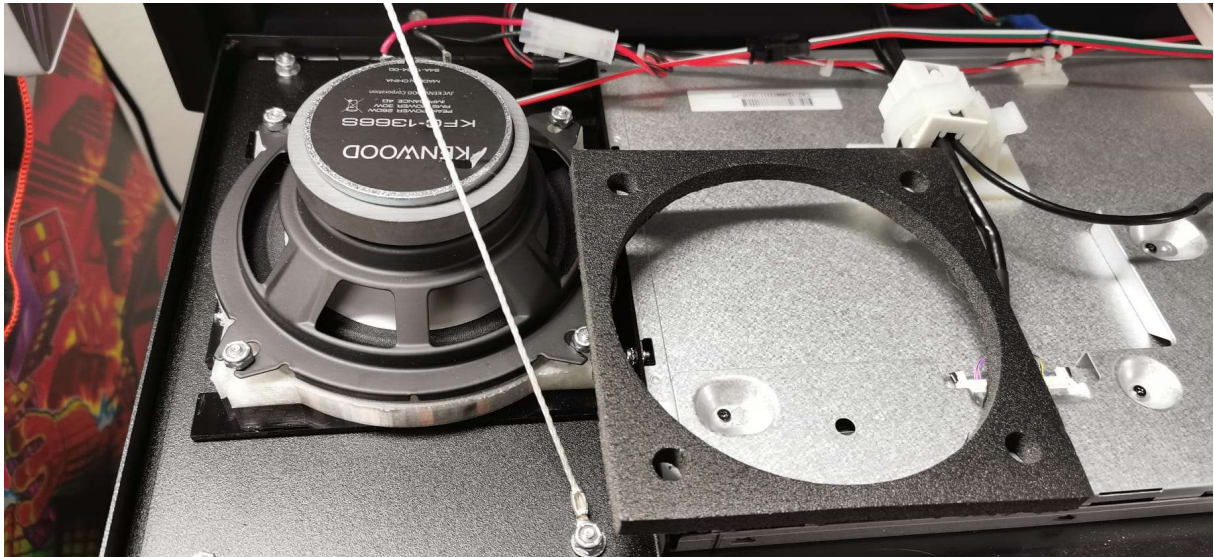


Connect the controller board to the SpeakerLightKit via the 3-pin connector and connect the system to the Pinball.

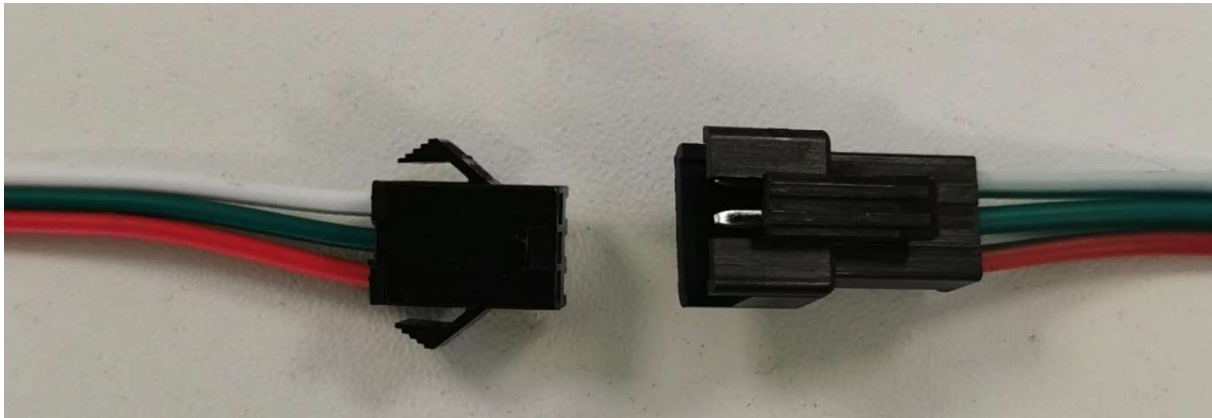

When mounting the connector on the board, make sure that + and - are not interchanged.

(+) = red cable

(-) = black cable

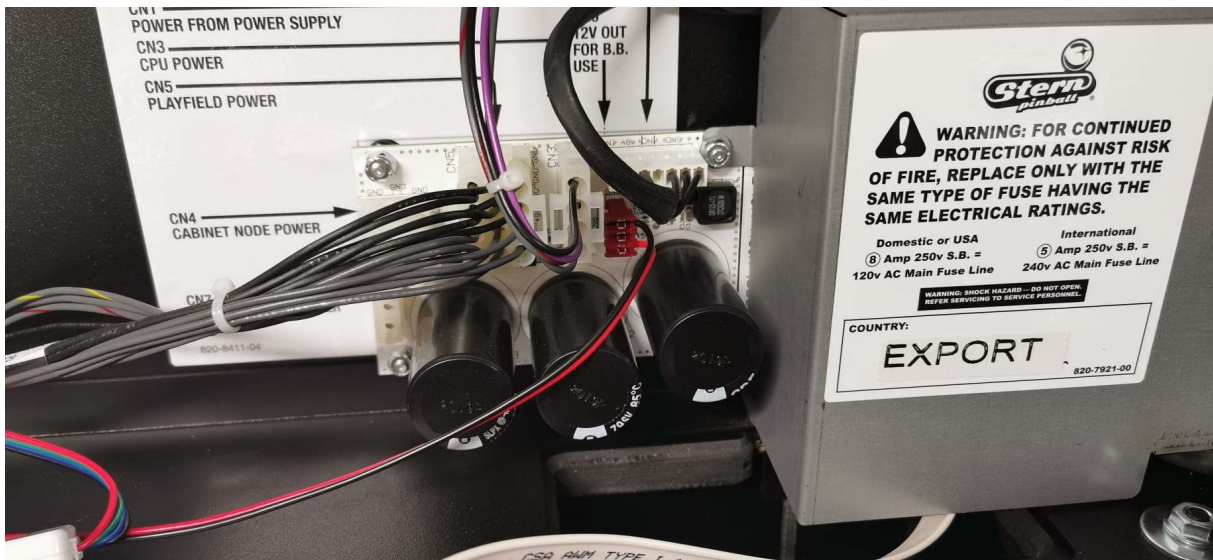

Place the voltage transformer (small black box) in the backbox and close the cover.

Reconnect the power plug and start the system.

The remote control can be used to set the colors fixed or select an effect.

We wish you a lot of fun with the rotation set from SpeakerLightKits.de