

Mounting instructions



SPEAKER
LIGHT
KITS . DE

Speaker lighting **Rotation**

System: Spike 1

- Game of Thrones
- Ghostbusters
- KISS
- Wrestlemania

Note in advance:

The SpekerLigtKit Rotation System works with a 5V power supply.

It is powered by the 12 V power supply of the pinball machine.

It should only be connected as described in this manual in order not to cause damage to the device or the lighting system.

Even if working with a low voltage, it is recommended to unplug the pinball machine before opening and mounting.

Assembly:

Open the backbox and fold down the cover.

It is recommended to put a soft object between the bezel and the disc to take the pressure off the bezel and avoid scratches on the siderails.


Unscrew the speaker.

Mount the SpekerLigtKit on the bracket where the speaker was sitting before. The opening with the cables must point towards the DMD.

Mount the speaker on the SpekerLigtKit.


If the speaker system has an additional mounted capacitor, it has to be fixed at the UPPER screw, because it could cause a short circuit at the side.

The right and left loudspeaker are identical in mounting.

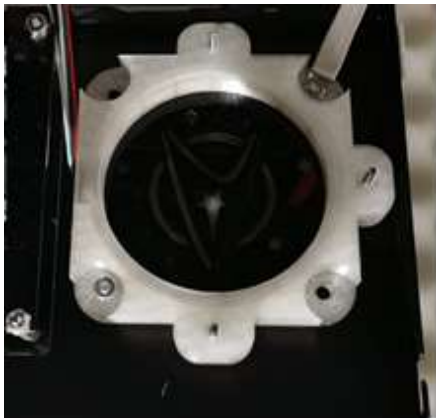

Attach capacitor here


Connect the controller board to the SpeakerLightKit via the 3-pin connector and connect the system to the Pinball.

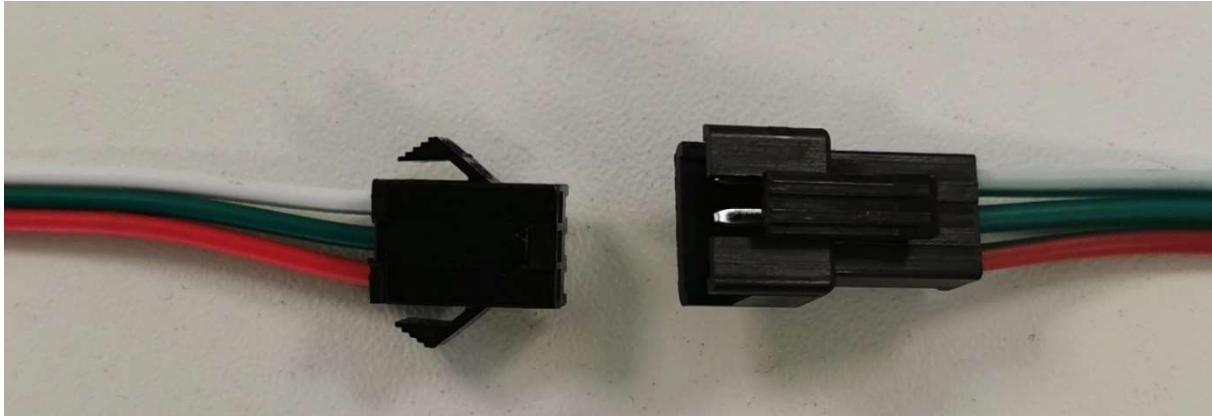

When mounting the connector on the board, make sure that + and - are not interchanged.

(+) = red cable

(-) = black cable

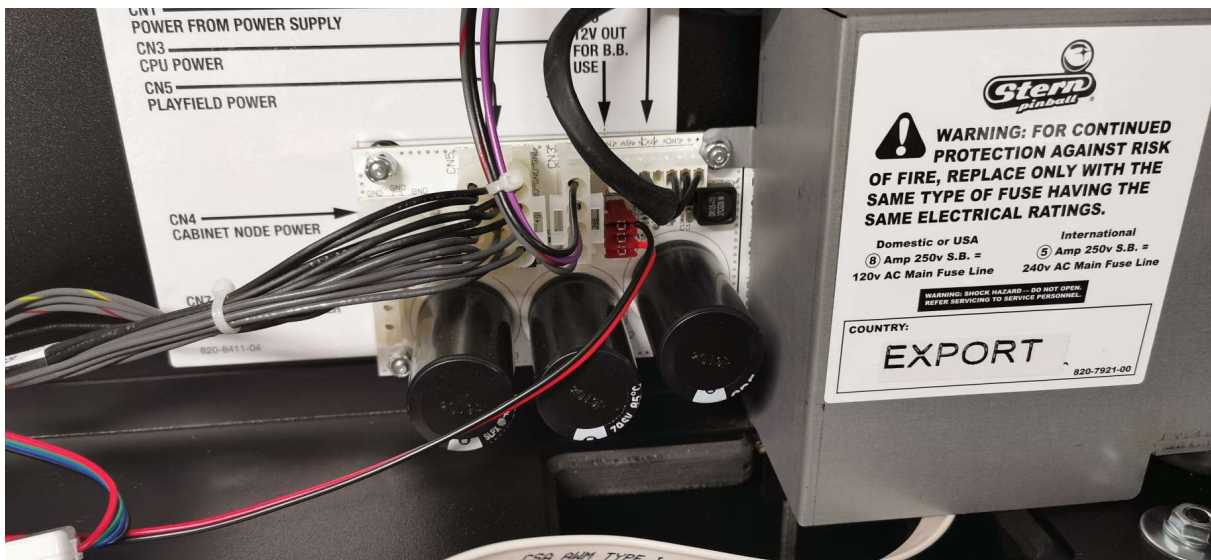

Place the voltage transformer (small black box) in the backbox and close the cover.

Reconnect the power plug and start the system.

The remote control can be used to set the colors fixed or select an effect.

We wish you a lot of fun with the rotation set from SpeakerLightKits.de