



<https://www.free-ride-addicted.fr>

Adjustable Release Footstraps Bindings:


Preamble

Thank you for purchasing these Adjustable Release Footstraps Bindings.

When falling forwards with significant traction on the strap (adjustable threshold), the metal hook of the binding will tilt and release the plate attached to the strap. The apparent simplicity of the mechanism is the result of long hours of reflection following a broken foot ...

Conversely, the mechanism will not trigger for pull-ups during toe lifting. You can therefore pull on the straps without inadvertent triggering

Please feel free to tell me about any ideas for improvement, any flaws or difficulties you could encounter.

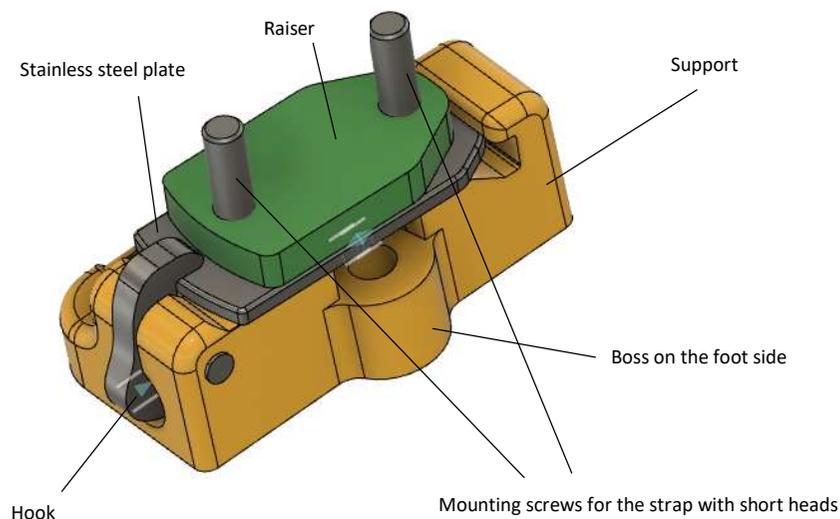

Disclaimer

If you have purchased this equipment, it is because you are aware of the risks involved in windsurfing or windfoiling and the lack of safety of current footstraps. The Free-Ride-Addicted footstrap bindings (patent pending) allow the foot to be freed from a forward fall but cannot negate all the risks presented by these sports.


FG Digital Developpement - 16 ch de la Lacade 31320 Auzeville- SASU au capital de 10 000€
SIRET: 852523562 00019 - N° de TVA intracommunautaire : FR22 852523562 - Code NAF 7490B

Skiing isn't practiced with shoes bolted to the boards, but unfortunately the traumas of the lower limbs remain.

Installation

Video here (french at the moment) : <https://vimeo.com/430364850>

Also on the FRA e-store.

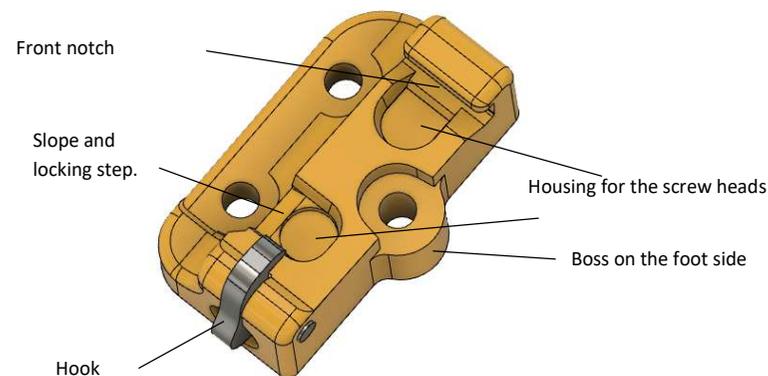

Mounting the supports: The 2 parts are symmetrical. The hook must be located towards the heel, the boss for the screw on the foot side being lodged in the hollow of the arch of the foot. The part shown above is suitable for the right foot.

The support has 3 holes. There should always be a screw in the hole closest to the hook. A second screw is to be put either on the same side of the part or in the hole on the foot side.

In these 2 options the distance between the screws is 1 inch.

Mounting the plates on the straps: (2 identical plates), (CF video from 3mm) position the most rounded side towards the toes (Cf drawing opposite). It may be necessary to improve the holes in the strap with a heated soldering iron or screwdriver. Depending on the thickness of the straps, put the washer or not. 2 sizes of screws are included. One plate is equipped with long ones the other with shorter ones. Choose which suits you best and replace 2 of the screws.

Engagement: (CF video from 4mm40 40'). Slide the front end of the plate into the notch in the support. Turn the rear part of the plate a quarter of a turn outward to bypass the hook. Slide the corner of the plate under the hook, push on the bottom of the hook if necessary. Complete the rotation. The click sound means the second screw head is positioned in the support housing.

Do not try to remove the support from the board without triggering the system first. Loosen the adjustment if necessary.

FG Digital Developpement - 16 ch de la Lacade 31320 Auzeville- SASU au capital de 10 000€
SIRET: 852523562 00019 - N° de TVA intracommunautaire : FR22 852523562 - Code NAF 7490B

Setting

The internal screw makes it possible, by compressing the retaining spring to a greater or lesser extent, to adjust the release force. It is therefore of the user's responsibility to ensure that the setting is suitable for his practice.

The optimal setting should allow navigation without unwanted triggering while offering the possibility of triggering the system with a sharp tilt of the foot.

A first adjustment is to be made on land by tightening the adjustment screw 3 turns from the flush position. Then test the trigger on water or on land with this setting. Harden (by screwing) or soften by half-turns. Take a key with you during the first rides to refine it according to your practice. Retesting your adjustment from time to time will be a good practice which is quite reassuring.

Maintenance :

As with any mechanical component, although made of plastic and stainless steel, seawater (salt, sand) can create problems over time. It is therefore recommended to rinse the mechanism with fresh water from time to time.

To do this, completely remove the adjustment screw, apply a garden hose to the hole thus freed and rinse.

Also check the position of the axis which may move slightly over time.

Warranty :

2 years.

Good and numerous safe trips