
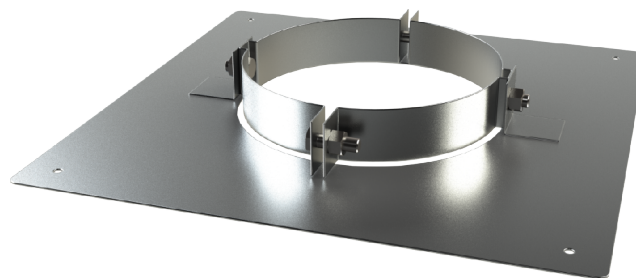


Verdiepingsondersteuning

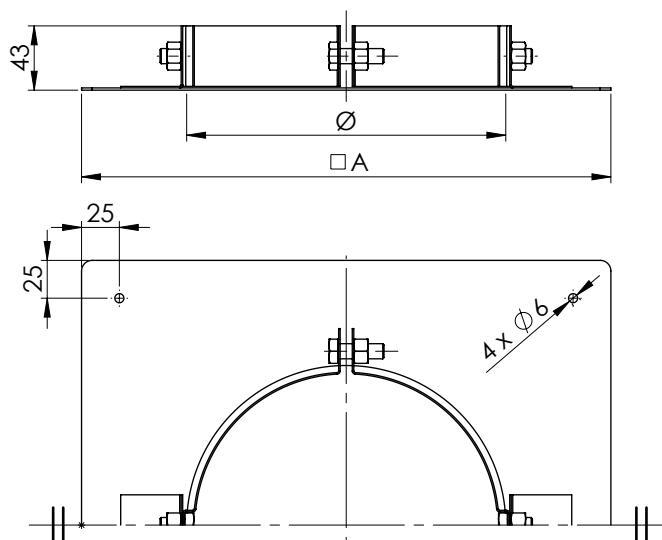

SYSTEMEN (Ø inw.)								ARTIKELCODE (Ø uitw.)	MATEN
DW DWP	DWH DWBA	DWL DWLK	EK EW	EWP EWPG	DWG DWGH	DWLG	DWD		□A
---	---	---	80	80	---	---	---	VERDO080	230
---	---	---	100	100	---	---	---	VERDO100	250
---	---	---	110	---	---	---	---	VERDO110	260
---	---	---	120	---	---	---	---	VERDO120	270
---	---	---	125	---	100	80	---	VERDO125	275
80	---	---	130	---	---	---	---	VERDO130	280
100	---	80 100	150	---	---	---	80	VERDO150	300
---	---	---	---	---	130	---	---	VERDO155	305
---	---	---	---	---	---	---	100	VERDO170	320
125	---	---	---	---	150	---	---	VERDO175	325
---	---	---	180	---	---	---	---	VERDO180	330
150	130	130 150	200	---	---	---	130	VERDO200	350
---	---	---	---	---	180	---	---	VERDO205	355
---	150	---	---	---	---	---	150	VERDO220	370
---	---	---	---	---	200	---	---	VERDO225	375
180	---	---	---	---	---	---	---	VERDO230	380
200	180	---	250	---	---	---	180	VERDO250	400
---	200	---	---	---	---	---	200	VERDO270	420
---	---	---	---	---	250	---	---	VERDO275	425
250	---	---	300	---	---	---	---	VERDO300	450
---	250	---	---	---	---	---	250	VERDO320	470
---	---	---	---	---	300	---	---	VERDO325	475
300	---	---	350	---	---	---	---	VERDO350	500
---	300	---	---	---	---	---	300	VERDO370	520
---	---	---	---	---	350	---	---	VERDO375	525
350	---	---	400	---	---	---	---	VERDO400	550
---	350	---	---	---	---	---	350	VERDO420	570
---	---	---	---	---	400	---	---	VERDO425	575
400	---	---	---	---	---	---	---	VERDO450	600
---	400	---	---	---	---	---	400	VERDO470	620

28.02.2020
REV: 0