



# Pond window 100x50 cm Installation instructions

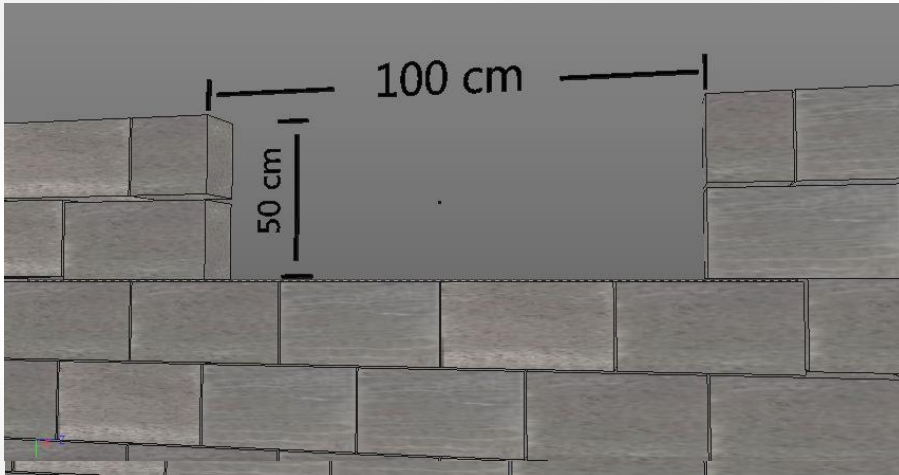


## Step 1.

Build a wall with a recess 100 cm in length and 50 cm in height.

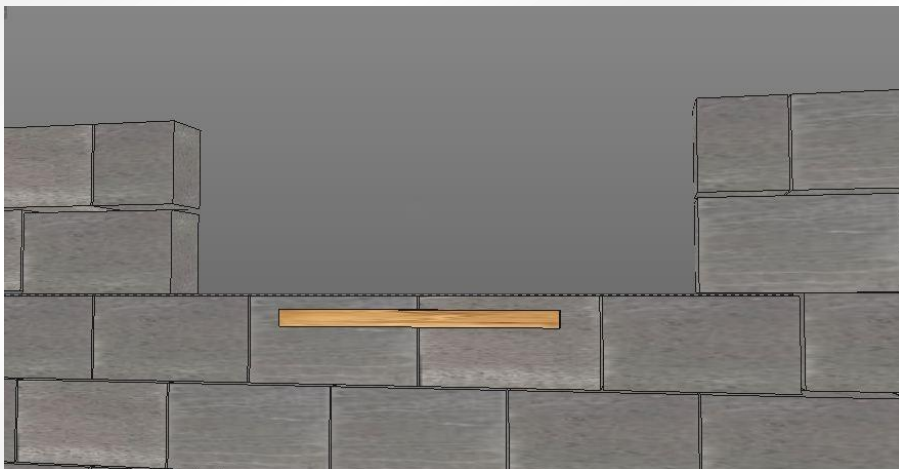


## Step 2.

To make the work easier, you can fix a wooden slat under the pond window. This way the pond window can be placed on the wooden slat.

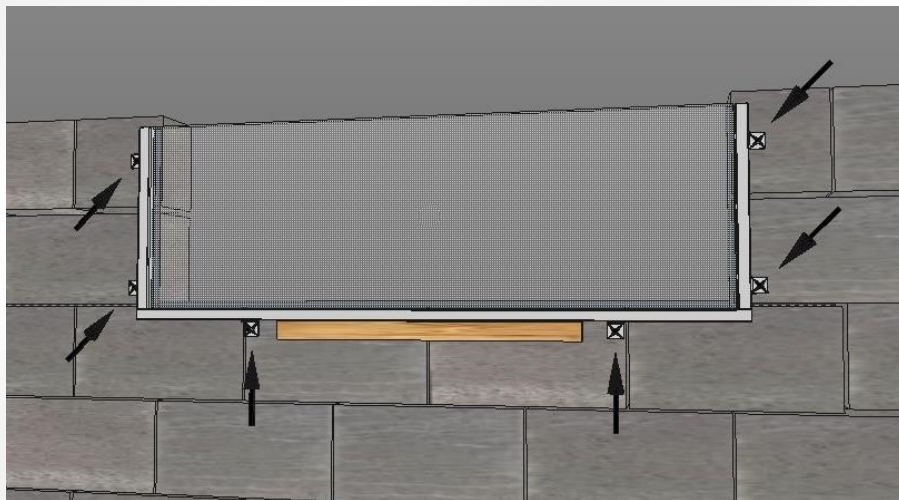


## Step 3.

Mark the 6 drill holes with a pencil. Then place the pond window to one side.

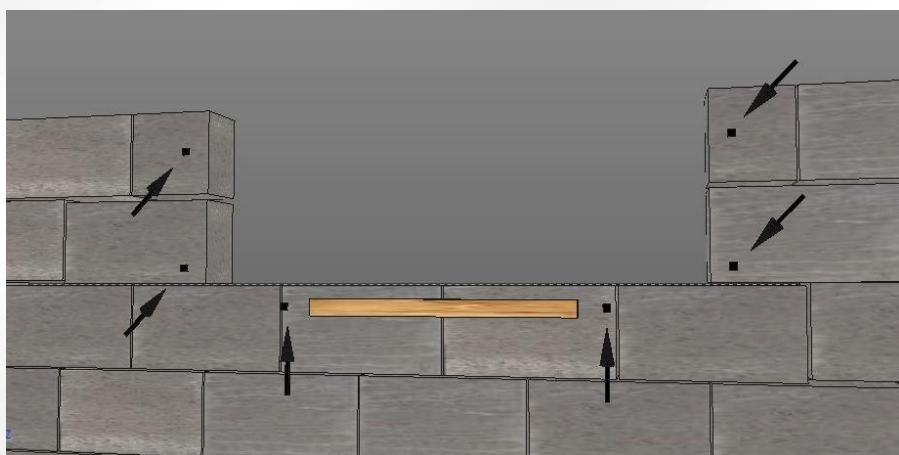


## Step 4.

Drill into the previously marked spots and insert the dowels.

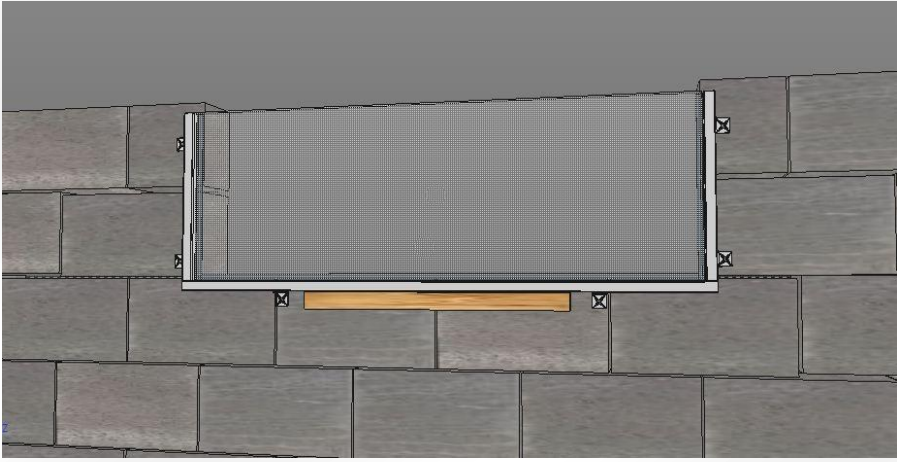


**Step 5.**

Fix the pond window in its final position with the screws. The wooden slat can then be removed. The pond window is now firmly mounted. The screws must not be tightened too much. (If the wall is not straight and the screws are tightened too much, the frame could warp, and the pane could crack).

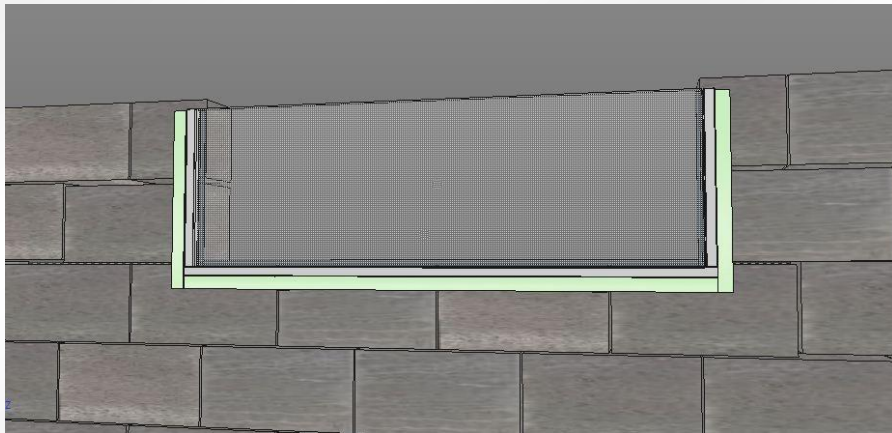

**Step 6.**

Glue the styrofoam strips in the appropriate places.

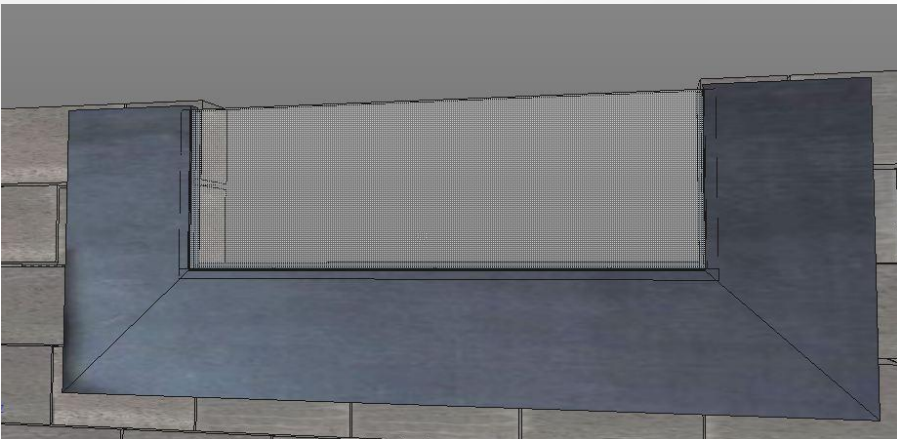

**Step 7.**

Unfold the film. The form should be firmly glued to the frame.



**Step 8.**

Weld the pond window foil together with the foil in the tank.