

ASSEMBLY INSTRUCTION HPC - Mounting Kit 2

Content:

- 2x screws short
- 2x rubber buffer
- 2x nuts
- 2x screws long



1. Loosen and remove the front mounting screws



2. Loosen and remove the rear mounting screw




3. Take off both plastic parts and place the engine skidplate on them



4. Drill two holes with D=5.5 mm on the left and right side



5. Insert the long screws supplied into the holes.

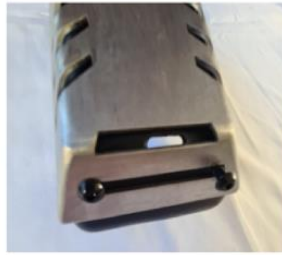

6. Screw the supplied nuts onto the screws and tighten everything down



7. Attach the small plastic part to the frame with the rubber buffers. Please screw in only 1-2 threads so that the plastic part can be moved easily!



8. Push the connected parts back onto the frame. The large plastic part must be inserted under the small plastic part. Proceed patiently and carefully to avoid damage!



9. Screw both rubber buffers completely into the frame and tighten them. (If necessary, use a tool such as small pointed needle-nose pliers for this purpose. Be careful not to damage the rubber buffers!)



10. Fasten the engine skidplate in the rubber buffers using the short screws supplied.



11. Please tighten both screws only so that the rubber buffers are not damaged!



12. Insert the rear screw into the hole provided and tighten it.



Have fun with your new engine skidplate

